

Contents

1 About these instructions	28
1.1 Validity, storage and forwarding of the instructions	28
1.2 Symbols	28
2 Safety.....	29
2.1 Intended use	29
2.2 General safety notes	29
3 Device overview	31
4 Operation.....	32
4.1 Setting the target temperature	32
4.2 Navigation and settings	32
4.2.1 Lifestyle functions menu	34
4.2.2 Settings menu	38
4.2.3 Service menu	43
5 Comfort and protection functions.....	46
5.1 Comfort functions	46
5.1.1 Smart Start/Smart Stop function	46
5.1.2 Heating/cooling change-over	46
5.1.3 Restricted Mode	46
5.2 Protection functions	47
5.2.1 Valve protection function	47
5.2.2 Antifreeze protection	47
6 Maintenance	48
6.1 Troubleshooting	48
6.2 Cleaning	48

DEU

ENG

FRA

NDL

ITA

ESP

1 About these instructions

1.1 Validity, storage and forwarding of the instructions

These instructions apply to the room thermostats of the following types:

- RD 40203-10 – Standard 24 V,
- RD 20203-10 – Standard 230 V,
- RD 45203-40 – Comfort 24 V,
- RD 25203-40 – Comfort 230 V,
- RD 45203-60 – Control 24 V,
- RD 25203-60 – Control 230 V.

DEU

ENG

FRA

NDL

ITA

ESP

These instructions include information necessary for the operation of the devices. The room thermostats are designated as “Standard”, “Comfort” and “Control” in order to point out differences between these types. These instructions must be read completely and thoroughly before commencing any work with the devices. These instructions must be kept and to be handed over to future users. You can view and download these instructions and the associated installation instructions under www.ezr-home.de.

1.2 Symbols

The following symbols are used in this manual:



Hazard symbols: Identifies a hazard



Information: Identifies important or useful information



User action



Result from an action



List without fixed order



List with fixed order

2 Safety

2.1 Intended use

The room thermostat controls, directly or via a connection unit, thermal actuators connected in a room-by-room temperature control system. It is suitable for 24 V or 230 V components, depending on the variant. The unit serves for

- a fixed installation,
- the registration of the actual temperature (room temperature),
- the setting of the target temperature (comfort temperature)
- the control of the actual temperature by activating actuators in heating operation (Standard) or heating/cooling operation (Comfort, Control) in an assigned zone,
- the connection of an external sensor (Control).

DEU

ENG

FRA

NDL

ITA

ESP

Every other use, modification and conversion is expressly forbidden and leads to dangers the manufacturer cannot be held liable for.

2.2 General safety notes

All safety notes in these instructions must be observed in order to avoid accidents with personal damage or property damage.

- Only an authorised electrician may open the device. It may only be opened in de-energised state.
- Always disconnect from the mains network and secure against unintended activation before opening.
- Only use the device if it is in flawless state.
- Observe the performance limits of the device and the environmental conditions.
- This device is not intended to be used by persons (including children) with restricted physical, sensory or mental skills or who lack experience or knowledge. If necessary, these persons must

be supervised by a person responsible for their safety or receive instructions from this person on how to use this unit.

- Ensure that children do not play with this device. Children must be monitored if necessary.
- In case of emergency, disconnect the complete room-by-room temperature control system.

DEU

ENG


FRA

NDL

ITA

ESP

3 Device overview

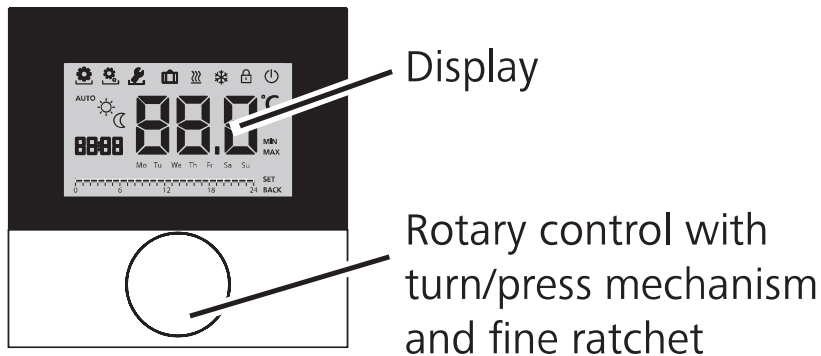

Room thermostats					
Type	Symbol	Meaning	Symbol	Meaning	
Standard Comfort Control		Lifestyle functions menu	°C	Temperature unit	DEU
		Settings menu	88.8	Target/actual temp.	ENG
		Heating	MIN	Min. temperature	FRA
		Operating lock	MAX	Max. temperature	NDL
		Switching off	SET	Make/confirm entry	ITA
	AUTO	Automatic operation	CAL	Correction of actual temp. measuring	ESP
		Day operation	BACK	Back	
		Night operation			
		Service menu	LED	Display illum.	
		Cooling	USER-PS	Factory settings	
		Holiday function	CLo	Time indications	
	88:88	Time	Pro	Comfort programs	
	Mo – Su	Week day	---	Setting the min.floor temperature ¹	
		Time scale			

¹Displayed if an external floor sensor is registered.

4 Operation



 
WARNING

Danger to life in case of swallowing!

The rotary control can be taken off; children might swallow it.

➤ Do not lay down the rotary control near children.

4.1 Setting the target temperature

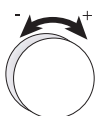

The target temperature is set by turning the rotary control to the left or to the right. Rotating to the left decreases the temperature, rotating to the right increases it.

DEU

ENG

FRA

NDL

ITA

ESP



Room thermostats Comfort and Control

 
Comfort temperatures for day and night operation can be stored. A manual or automatic change between the operating modes day and night operation changes to the stored temperature. The target temperature can be changed with the rotary control, independent from the active operating mode. You can find more information in section *Lifestyle functions menu*.

4.2 Navigation and settings

The navigation and settings of the room thermostat are performed with the rotary control:



By pressing the rotary control, menus are opened and functions are activated, and changed settings are applied.

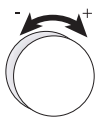

By rotating the rotary control, settings can be done and functions and menus can be chosen.

A basic level and three menus are available for navigation and settings:

Basic level

In the basic level, all room thermostats show the current actual temperature as well as active functions. The Control variant additionally is equipped with a clock function.

Menu selection

The available menus depend on the room thermostat variant.



Lifestyle functions (Standard, Comfort, Control)

Includes all important basic functions.



Settings (Standard, Comfort, Control)

Includes extended functions and numerous setting possibilities.



Service (Comfort, Control)

Includes various system parameters. An optimal tuning of the overall system can be obtained by corresponding settings.



Back

Leaves the menu selection and returns to the basic level.

DEU

ENG

FRA

NDL

ITA

ESP




- A selected menu resp. a selected function is displayed with a flashing symbol.
- If no operation is performed, the display returns to the basic level after approximately 5 seconds.

4.2.1 Lifestyle functions menu

This menu allows the setting of the lifestyle functions. Depending on the room thermostat variant, the settings listed in the graphic are available. The following pages contain detailed information.





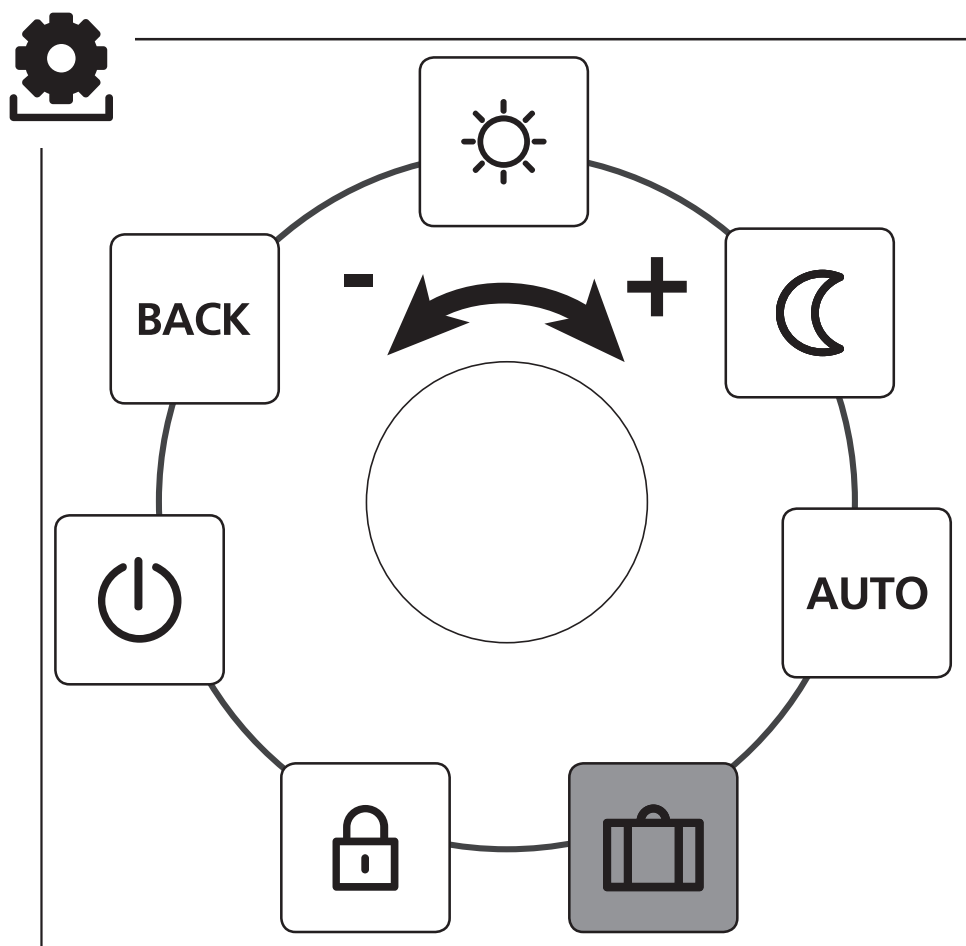

- For the selection of an operating mode (day, night, automatic operation) only the inactive modes are available for selection.
- If no operation is performed, the display returns to the basic level after approximately 30 seconds.



- ☐ Standard, Comfort and Control
- ☒ Only Control

- Open the menu selection by pressing.
- Select the menu *Lifestyle functions*.
- Activate the menu by pressing again.
- Select the desired function.

Description	Steps
 Day operation Standard Adjustment to the set target temperature. Comfort, Control Adjustment to the set <i>comfort temperature</i> in the menu <i>Settings</i> .	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ Day operation is activated. ✓ The basic level is displayed.
 Night operation Standard The software internally lowers the target temperature set for <i>day operation</i> by 2 °C.  The symbol  flashes if the target temperature is changed. The temperature change is applied for day operation. Subsequently, the software re-calculates the reduction temperature for night operation. Comfort, Control Adjustment to the set <i>reduction temperature</i> in the <i>Settings</i> menu.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ Night operation is selected. ✓ The basic level is displayed.

DEU

ENG

FRA

NDL

ITA

ESP

DEU




ENG







FRA

NDL

ITA

ESP

Description	Steps
<div data-bbox="240 262 354 378">  </div> <p>Automatic operation</p> <p>Standard, Comfort The signal of an external system clock (e. g. from a Control room thermostat) activates day or night operation.</p> <p>Control Automatic temperature control according to the <i>Comfort programs</i> in the <i>Settings</i> menu.</p>	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ Automatic operation is activated. ✓ The basic level is displayed. ✓ Control: The time scale is displayed.
<div data-bbox="240 804 354 919">  </div> <p>Holiday function Automatic reduction to the set <i>holiday temperature</i> in the <i>Settings</i> menu.</p>	<p>Activate</p> <ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the number of holiday days by rotating. ➤ Confirm the entry. ✓ The holiday function is activated immediately. ✓ The basic level is displayed. <div data-bbox="922 1234 1471 1419"> <div data-bbox="922 1234 1003 1318">  </div> <p>A subsequent change of the target temperature deactivates the holiday function.</p> </div> <p>Deactivate</p> <ul style="list-style-type: none"> ➤ Observe the operating steps under "Activation". ➤ Set the number of holiday days to 00 by rotating.

Description	Steps
 Operating lock Blocks the room thermostat. The actual temperature and all active functions are still displayed, the possibility to change the target temperature and the operation are deactivated.	Activate <ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ The operating lock is activated. ✓ The symbol  is displayed. ✓ The basic level is displayed. Deactivate <ul style="list-style-type: none"> ➤ Press the rotary control for > 5 seconds. ✓ The symbol  is deactivated, operation is possible again.
 Switching off Switches the room thermostat off. Temperature control is deactivated. The protective functions (valve protection and antifreeze protection) remain active. For the room thermostat Control, the comfort programs from the <i>Settings</i> menu are still applied. Queued switching signals are given out to connected thermostats via the reduction output.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ All functions are deactivated. ✓ The symbol  is displayed. ✓ The target temperature is displayed Switching on <ul style="list-style-type: none"> ➤ Press the rotary control for > 5 seconds. ✓ The basic level is displayed. ✓ All active functions are displayed.
 Back Leaves the menu.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ The display is in basic level.

DEU

ENG

FRA

NDL

ITA


ESP

4.2.2 Settings menu

Extended settings can be made in this menu. Depending on the room thermostat type, the settings listed in the graphic are available. The following pages contain detailed information.



If no operation is performed, the display returns to the basic level after approximately 30 seconds.

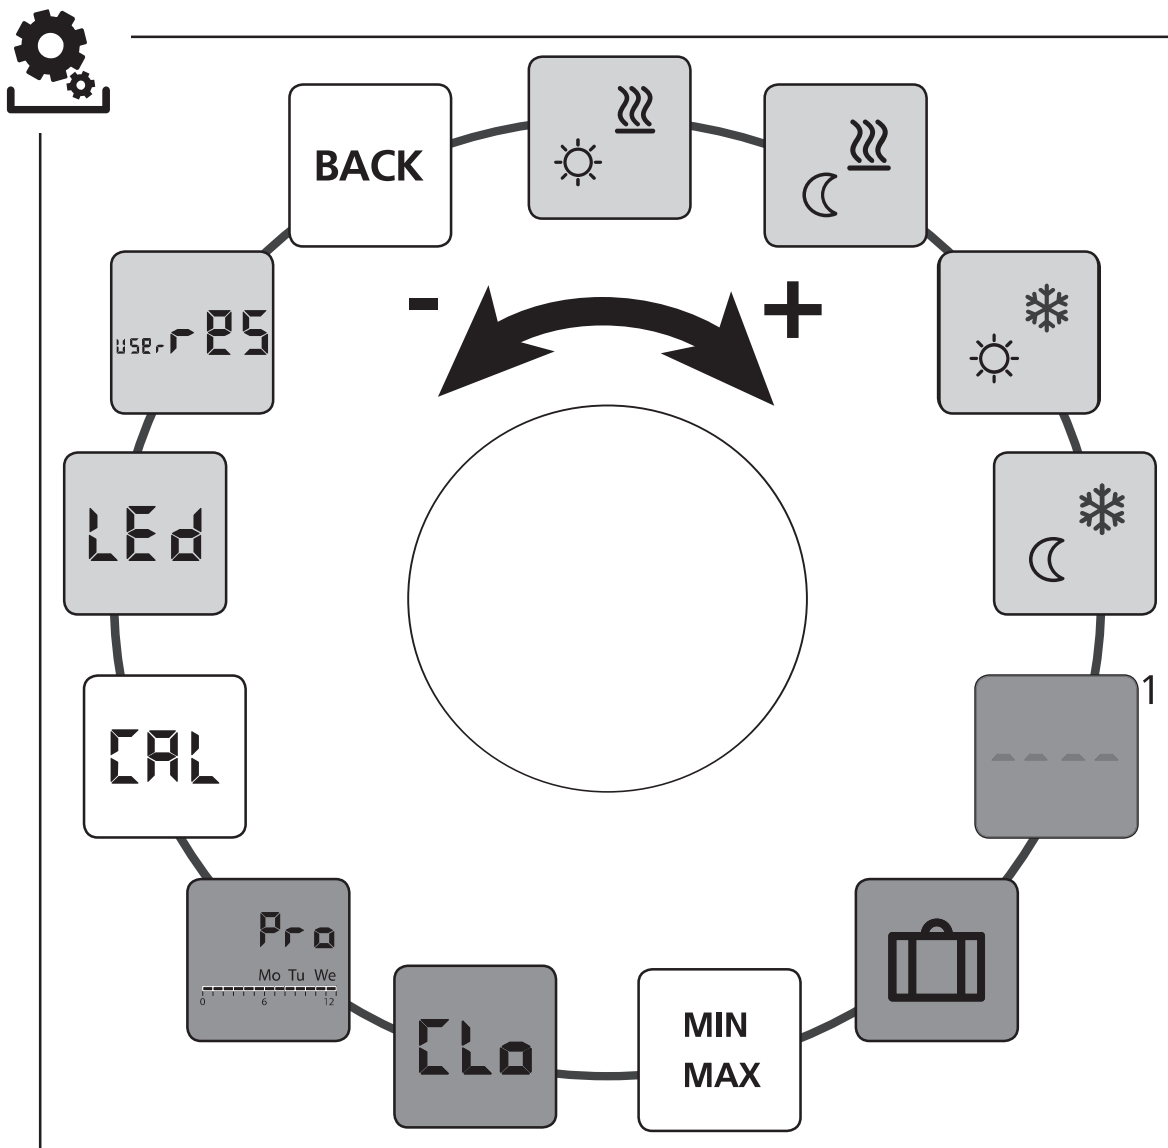





☐ Standard, Comfort and Control

☐ Only Control

☐ Comfort, Control

- Open the menu selection by pressing.
- Select the *settings* menu.
- Activate the menu by pressing again.
- Select the desired setting.

Description	Steps
 Comfort temperature Heating Setting the target temperature for day operation.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the target temperature. ➤ Confirm the entry by pressing. <p>✓ This is displayed in the <i>Settings</i> menu.</p>
 Reduction temperature Heating Setting the target temperature for night operation.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the target temperature. ➤ Confirm the entry. <p>✓ This is displayed in the <i>Settings</i> menu.</p>
 Comfort temperature Cooling Setting the target temperature for day operation.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the target temperature. ➤ Confirm the entry. <p>✓ This is displayed in the <i>Settings</i> menu.</p>
 Reduction temperature Cooling Setting the target temperature for night operation.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the target temperature. ➤ Confirm the entry. <p>✓ This is displayed in the <i>Settings</i> menu.</p>

DEU






ENG

FRA

NDL

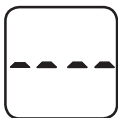ITA

ESP

Description	Steps
 External floor sensor Setting the minimum floor temperature.  This function is displayed if the connection of an external floor sensor is defined in the <i>Service</i> menu under Parameter 040.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Make the setting. ➤ Confirm the entry. ✓ The display flashes in the <i>Settings</i> menu.
 Holiday temperature Setting the target temperature for the <i>holiday function</i> in the <i>Lifestyle functions</i> menu.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the target temperature. ➤ Confirm the entry. ✓ This is displayed in the <i>Settings</i> menu.
 Target temperature limitation Setting of the maximum and minimum settable target temperature.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the minimum temperature. ➤ Confirm the entry. ➤ Set the maximum temperature. ➤ Confirm the entry. ✓ This is displayed in the <i>Settings</i> menu.
 Time indications Setting of time and weekday.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the time (hh:mm) and the weekday by rotating and apply by pressing. ✓ This is displayed in the <i>Settings</i> menu.

Description	Steps
<div data-bbox="170 262 284 373" data-label="Image"> </div> <p>Comfort programs In automatic operation there is a control with the switching times of the comfort programs:</p> <ul style="list-style-type: none"> • Week (Mon–Sun) • Weekdays (Mon–Fri) • Weekend (Sat–Sun) • Day (Mon, Tue, Wed, Thu, Fri, Sat, Sun) <p>Every weekday can include four switching times (P1 - P4). After reaching the starting time, the comfort temperature is adjusted. Outside the switching times control is performed according to the reduction temperature. The predefined switching times can be adapted individually:</p> <p>Mon–Fri: 5.00 am - 8.00 am 3.00 pm - 10.00 pm</p> <p>Sat - Son: 6.00 am - 11.00 pm</p> <div data-bbox="170 1249 251 1327" data-label="Image"> </div> <ul style="list-style-type: none"> • Automatic operation must be activated. • The comfort and reduction temperatures must be set in the <i>Settings</i> menu. • The current time indications must be set. • If connected room thermostats are in automatic operation, the Comfort programs allow a change between day and night operation. 	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. <p>✓ The display switches to the comfort program overview; the display indicates “day”.</p> <ul style="list-style-type: none"> ➤ Select and activate a comfort program. ➤ Select a switching time P1 to P4. ➤ Set the start time and the end time by rotating and apply by pressing. ➤ Return to the comfort program overview with “BACK”. ➤ Set further switching times or change to the <i>Settings</i> menu with “BACK”.

DEU

ENG

FRA

NDL

ITA

ESP

Description	Steps										
<div data-bbox="245 264 355 375"></div> Temperature correction Corrects a deviating measurement of the actual temperature of the internal sensor by ± 2 °C in 0.1 °C increments. <div data-bbox="245 516 318 590"></div> Do not perform any temperature correction until 2 hours after commissioning.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the correction value. ➤ Confirm the entry. ✓ This is displayed in the <i>Settings</i> menu.										
<div data-bbox="245 680 355 791"></div> Display illumination Sets the brightness of the display illumination in five levels: <table data-bbox="245 831 540 1045"> <tr><td>0</td><td>Off</td></tr> <tr><td>25</td><td>Level 1</td></tr> <tr><td>50</td><td>Level 2</td></tr> <tr><td>75</td><td>Level 3</td></tr> <tr><td>100</td><td>Level 4</td></tr> </table> <div data-bbox="245 1085 318 1159"></div> The display of the setting is signalled by the time scale.	0	Off	25	Level 1	50	Level 2	75	Level 3	100	Level 4	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Set the brightness of the display illumination. ➤ Confirm the entry. ✓ The <i>Settings</i> menu is displayed.
0	Off										
25	Level 1										
50	Level 2										
75	Level 3										
100	Level 4										
<div data-bbox="245 1209 355 1320"></div> Factory settings Restores the factory settings. All previously made settings will be reset.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ➤ Select the entry "Yes" for resetting. ➤ Press the rotary control for 5 seconds. ✓ A restart is performed. The basic level is displayed subsequently. <div data-bbox="927 1640 1000 1713"></div> The entry "No" cancels the process.										
<div data-bbox="245 1757 355 1869"></div> Back Leaves the menu.	<ul style="list-style-type: none"> ➤ Confirm the selection by pressing. ✓ The basic level is displayed.										

4.2.3 Service menu



CAUTION

Damage to the installation!

Faulty configuration can lead to errors and installation damage.

➤ Only authorised specialists may perform settings.

Room thermostats Comfort and Control!

An optimal tuning of the overall system can be reached by corresponding settings of the system parameters. In order to avoid a faulty configuration, this menu is protected by a 4-digit PIN (standard: 1234).

DEU

ENG

FRA

NDL



ITA

ESP

- Open the menu selection by pressing.
- Select the *Parameter* menu.
- Activate the menu by pressing again.
- Select the menu entry "Code".
- Activate the PIN entry by pressing.
- Enter the 4-digit PIN (standard: 1234). Select the individual ciphers by rotating and confirm by pressing.
- Start the entry by activating the function "PAr".
- Select the individual ciphers of the parameter number by rotating and confirm by pressing.
- Activate the entry by selecting "SET" and by pressing.
- Perform the setting according to the subsequent parameter list.
- Return to the basic level by selecting "BACK" 2 times.



If no operation is performed, the display returns to the basic level after approximately 30 seconds.

No.	Description	Setting
010	Heating system Sets the existing heating system: <ul style="list-style-type: none"> Floor heating, standard (FBH St.) Floor heating, low energy (FBH NE) Radiator (RAD) Convactor, passive (KON pas) Convactor, active (KON akt) 	0 = FBH St. 1 = FBH NE 2 = RAD 3 = KON pas 4 = KON akt <i>Standard: 0</i>
020	Blocking of cooling Deactivates the cooling function.	0 = activated 1 = deactivated <i>Standard: 0</i>
030	Operating lock Protects the deactivation of the operating lock with a PIN.	0 = deactivated 1 = activated <i>Standard: 0</i>
031	PIN operating lock Sets the PIN for parameter 30.	0 ... 9999 <i>Standard: 0000</i>
	 If PIN is unknown: <ul style="list-style-type: none"> ➤ Disconnect the device from the mains network. ➤ Hold down the rotary control and apply voltage again until the software version is shown on the display and goes out again. ➤ Press the rotary control again until the symbol  disappears. 	
032	Restricted operation Switch-over of the room control unit operating lock between "Standard" and "Restricted operation".	0 = deactivated 1 = activated <i>Standard: 0</i>
040	External sensor (only Control) Registration of an external room sensor or floor sensor. The registration of a room sensor deactivates the internal sensor. If a floor sensor is used, the minimum floor temperature can be set via the <i>Settings</i> menu in the function "External floor sensor".	0 = no external sensor 1 = room sensor 2 = floor sensor <i>Standard: 0</i>

No.	Description	Setting
041	Correction of actual temperature of external sensor (only Control) Corrects a deviating measurement of the actual temperature.	-2 ... +2 °C <i>Standard: 0 °C</i>
050	Duration of the display illumination Sets the duration of further illumination of the display after use.	0 ... 30 sec. in 5 second increments <i>Standard: 15 sec.</i>
090	Signalling of switching output Signalises the control of switching outputs by a flashing heating resp. cooling symbol.	0 = deactivated 1 = activated <i>Standard: 1</i>
110	Control direction switching output Sets the control direction of connected actuators: <ul style="list-style-type: none"> • Normally closed (NC) • Normally open (NO) 	0 = NC 1 = NO <i>Standard: 0</i>
161	Antifreeze temperature Activates the antifreeze protection function when the temperature falls below the set temperature.	5 ... 10 °C <i>Standard: 5</i>
170	Smart Start/Smart Stop function (only Control) Teaches the temperature behaviour of the room.	0 = deactivated 1 = activated <i>Standard 1</i>
190	Valve protection function Cyclic opening of the valve in order to avoid clogging.	0 ... 28 days <i>Standard: 14</i>
191	Valve activation duration Time for triggering actuators for performing the valve protection function.	0 ... 10 minutes <i>Standard: 5 min</i>

DEU

ENG

FRA

NDL

ITA

ESP

5 Comfort and protection functions

5.1 Comfort functions

In order to increase the user comfort, the room thermostat includes functions for controlling the comfort temperature.

5.1.1 Smart Start/Smart Stop function

Only room thermostat Control:

The Smart Start/Smart Stop function (parameter 170) automatically calculates the required line-up times, so that the set comfort temperature is present at the start and end times of the comfort programs.

DEU

ENG

5.1.2 Heating/cooling change-over

FRA

Room thermostats Comfort and Control

The change-over function switches the entire installation between heating and cooling using an external signal.

NDL

ITA

5.1.3 Restricted Mode

The limited mode only allows the target temperature to be changed.

ESP

Activate mode



For the Standard type thermostats, the limited mode can only be activated ex works.

For the Comfort and Control thermostats, activation is as follows:

- Activate parameter 032 in the Service menu (value: 1).



The operating mode before the restart is accepted for restricted operation.

- De-energise the device.
- ✓ Apply voltage again.
- ✓ The restricted mode is activated.

Deactivate mode (Comfort, Control)

- De-energise the device.
- Hold down the rotary control and apply voltage again until the software version is shown on the display and goes out again.
- In the Service menu, deactivate parameter 032 (value: 0).
- ✓ The device is permanently in standard operation.

Temporarily deactivate mode (Standard, Comfort, Control)

The restricted mode can be temporarily deactivated to use or activate disabled functions of the device during this time. After a voltage interruption of the device, the restricted mode is reactivated.

- De-energise the device.
- Hold down the rotary control and apply voltage again until the software version is shown on the display and goes out again.
- ✓ The device is temporarily in standard operation until the next power interruption occurs.

DEU

ENG

FRA

NDL

ITA

ESP

5.2 Protection functions

The room thermostat is equipped with protection functions for avoiding damage to the overall installation.

5.2.1 Valve protection function


In periods without valve activation (e. g. outside the heating period), all valves are opened cyclically. This avoids a clogging of the valves (parameters 190 and 191).

5.2.2 Antifreeze protection

Independent from the operating mode, the room thermostat is equipped with an antifreeze function (parameter 161). When the temperature falls below the antifreeze protection temperature, all connected actuators are activated and the valves are opened.

6 Maintenance

6.1 Troubleshooting

Display	Meaning	Possible elimination
<div>DEU</div> <div>ENG</div> <div>FRA</div> <div>NDL</div> <div>ITA</div> <div>ESP</div> 	Measuring temperature of internal/external sensor exceeded	Internal sensor/room sensor <ul style="list-style-type: none"> Remove external heat sources in the direct environment and wait until the sensor has cooled down again. Reposition the room sensor if necessary. Have the room thermostat/room sensor checked and replaced if necessary. Floor sensor <ul style="list-style-type: none"> Have the floor sensor checked and replaced if necessary.
0004	Malfunction in external sensor (room/floor sensor)	<ul style="list-style-type: none"> No external sensor connected. Reset to the factory settings. Deactivate the external sensor in the <i>Service</i> menu under parameter 040. Have the external checked and replaced if necessary.
0010	Malfunction in internal sensor	<ul style="list-style-type: none"> Reset to the factory settings. Have the room thermostat checked and replaced if necessary.

6.2 Cleaning

Only use a dry and solvent-free, soft cloth for cleaning.

This manual is protected by copyright. All rights reserved. It may not be copied, reproduced, abbreviated or transmitted, neither in whole nor in parts, in any form, neither mechanically nor electronically, without the previous consent of the manufacturer. © 2019

